


WIRING of BNC


Code 368 208 Connector BNC/BRG type

Code 368 210 Connector BNC/CCA type

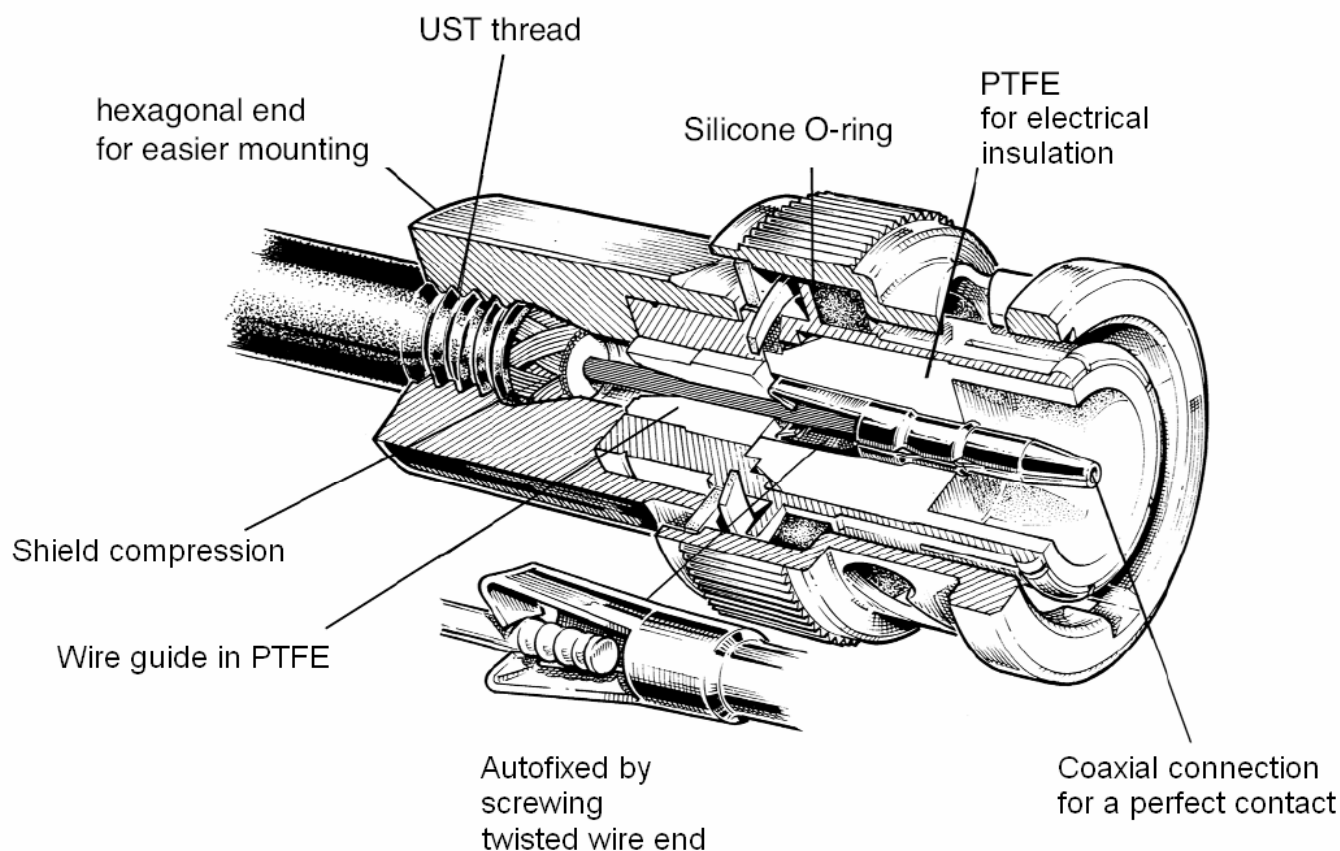

WIRING

- Strip the cable as it is shown.
- Cut the wire rope at 30° to have a good cable position in the connector.
- Twist the wire to make it more rigid.
- Put down the shield of one mm to bore a part dielectric, if this stage is wrongly done you will get short circuit
- Introduce the cable in the connector and screw this one with the exagonal end, and push it smoothly.

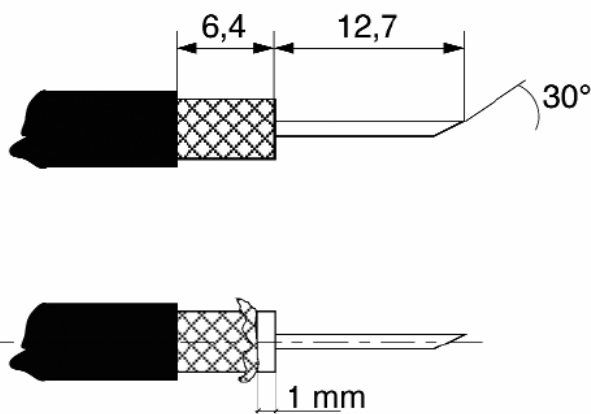

BAMO MESURES

22, Rue de la Voie des Bans - 95 100 ARGENTEUIL - FRANCE
 Tel.: +33 1 30 25 83 20 - E-mail: info@bamo.fr
 Fax: +33 1 34 10 16 05 - <http://www.bamo.eu>

COAXIAL CONNECTOR
BNC

11-06-2007

368 M1 01 B

MSA

368-01